
Agitator

These are the BEST Practices and installation instructions for the Ace Oilfield Agitator.

TOP TAG PUMPS

The AGITATOR is used for the purpose of intake problems. We want the agitator as close to the pump intake as possible. This being said at the bottom of the pump there should be only a saw tooth collar if wanted or needed for making hole. The no turn is located above the stator and top tag.

The space out on the pump is the same as always from rod and pump suppliers. The installation of the rotor is important. The agitator is made so it can be inserted and retracted from the stator.

When you have got the stator in the hole and direct circulated to make hole with the stator. Always flush the stator again, when it is in the proper location before running rods. This will hopefully eliminate sand being left in the stator and stopping the rotor and agitator from landing freely.

